


FAWZ

Mounting tool for twist proof receptacles

Receptacles for twist proof probes need to be mounted well aligned into the fixture or module. This can be done with the alignment tool FAWZ. This tool can be chucked into a lever press. In this case the alignment only needs to be done once.

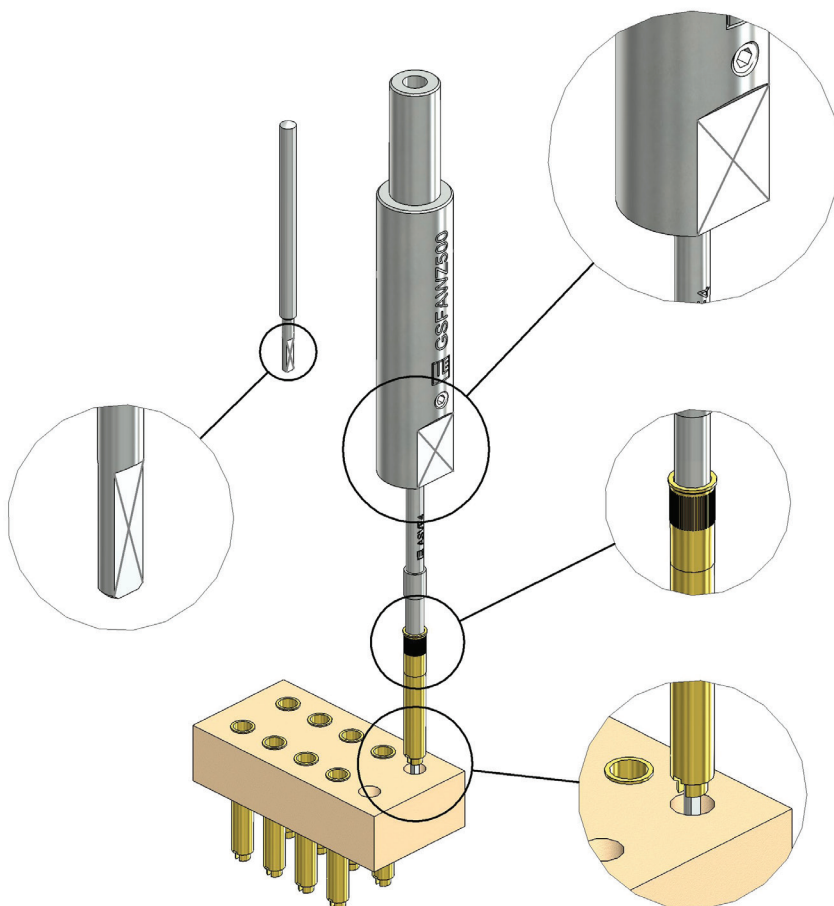

Order Code (BIT + Handle)	BIT	Handle	Length [mm]	e.g. for receptacles
FAWZ751	AS751	GSFAWZ500	118,0	H751
FAWZ755	AS755	GSFAWZ500	118,0	H755
FAWZ756	AS756	GSFAWZ500	118,0	H756
FAWZ761	AS761	GSFAWZ500	118,0	H760, H762
FAWZVF3	ASVF3	GSFAWZ500	139,6	HVF3
FAWZVF4	ASVF4	GSFAWZ500	124,0	HVF4
FAWZVF100	ASVF100	GSFAWZ500	129,0	HVF100